



V1504

Vertical
Platform Lift

Owner's
Manual

 savaria®

IMPORTANT – READ FIRST

Ensure that only an authorized Savaria mechanic installs and services your Lift. Under no circumstances is anyone other than a mechanic with Savaria training and authorization to install, adjust, service or modify any mechanical or electrical device on this equipment.

Failure to follow this warning can result in safety system compromises or defeat; this can result in serious injury or death. Savaria accepts no liability for property damage, warranty claims or personal injury, including death, in this circumstance.

Passenger safety is the result of countless details in the equipment design, manufacture, and installation. After installation, reliable operation and continual safe operation requires regular inspection and maintenance as outlined in this manual, or more frequently where usage, environment, or local jurisdiction requires. As the Owner, you are responsible for ensuring that regular inspections and maintenance occur in a timely manner as per the manufacturer's recommendations and maintenance schedule.

Refer to this owner's manual for unit description, setup, operating instructions, and a maintenance schedule for your Lift. Upon completion of installation, the Savaria mechanic must provide you with the information for the box below and ensure it is recorded in this owner's manual. In addition, either you or the Savaria mechanic must keep any service and/or maintenance records in the Maintenance Record section of this owner's manual.

At all times, your Lift must be maintained in compliance with the applicable standard to which it has been built and installed.

United States: A18.1–Safety Standard for Platform Lifts and Stairway Chairlift

Canada: CSA B355/613–Platform lifts and stair lifts for barrier-free access

Europe: EN-81-40 Stairlifts and inclined lifting platform intended for persons with impaired mobility

Europe: 2006/42/EC–Machinery Directive

Depending on your country or region, the local authority code variant may apply. To ensure safe operation of your Lift, pay careful attention to the important notes, and follow the instructions and any additional safety regulations in this manual.

FOR OWNER'S RECORDS

Customer Name: _____

Installing Dealer: _____

Dealer's Telephone Number: _____

Date Installed: _____

Serial/Job Number: _____

TABLE OF CONTENTS

1. SAFETY INSTRUCTIONS4
 To Ensure Safety4

2. DESCRIPTION5
 Platform Gate6
 Safety Underpan6
 Safety Brake7
 Emergency Stop Buttons7
 Manual Lowering and Battery Lowering System8
 Door Locks8

3. SPECIFICATIONS10

4. USING THE DEVICE12
 Attendant Operation12
 Operating from the COP Controls13
 Operating from the Landing Station Controls14

5. TROUBLESHOOTING15

6. MAINTENANCE16
 Maintenance Schedule (General)17
 Maintenance Schedule (Adjusted)20
 Maintenance Record23

1. SAFETY INSTRUCTIONS

To ensure safe operation of this unit, pay careful attention to the important notes below.

To Ensure Safety

- Read this manual carefully before using the equipment.
- To prevent accidents, adhere strictly to the instructions and keep clear of moving parts at all times.
- Follow instructions on all equipment labels at all times. Replace any damaged labels immediately.
- Ensure that only qualified personnel perform maintenance and service on the unit.
- When replacing parts, be sure that only genuine Savaria parts are used.
- This unit is intended for use by a mature person who understands its proper operation as set out in this manual.




At no time should children under the age of 16 use the lift while unsupervised.

- Prior to operation, make sure that:
 - All doors and gates are locked and secure.
 - All areas in and around the lift are clear of any obstructions.
 - All lights are functioning properly.
- Test your keys and emergency stop button every month.

2. DESCRIPTION

Exterior View

Below shows the exterior components of a V1504 (with a Type 1 cab and without an enclosure).

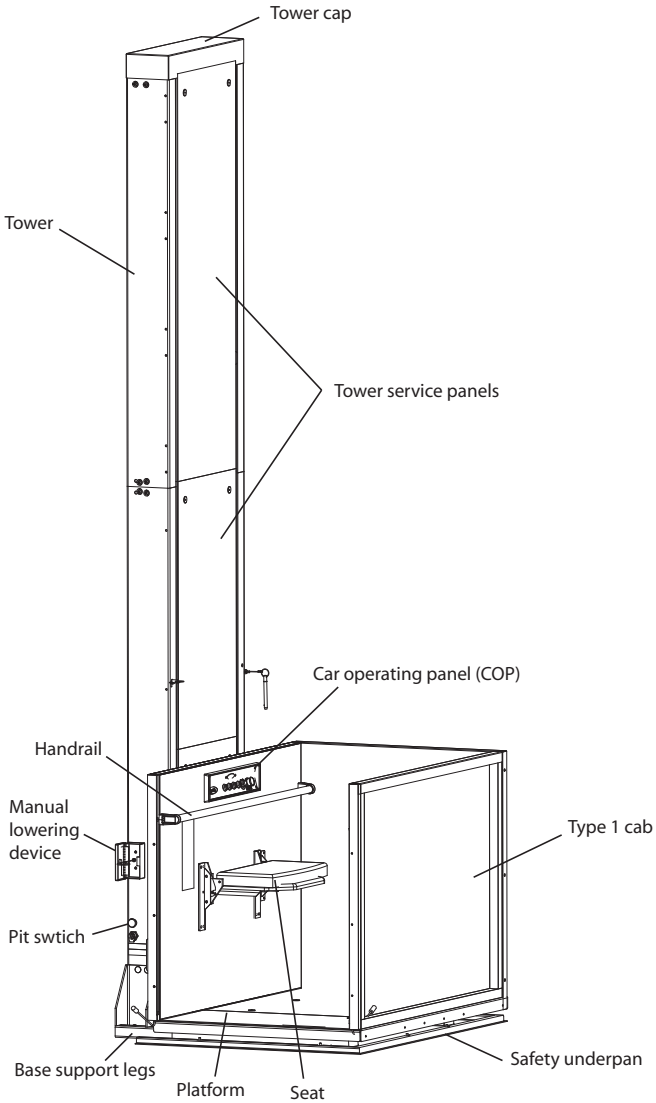

5. TROUBLESHOOTING



WARNING

Only qualified technicians are authorized to perform repairs and maintenance. DO NOT manipulate, modify or remove any safety feature of the lift. If any issues persist, please contact your authorized Savaria Dealer

Potential Problem	Possible Solution
Platform goes up but does not come down	Check the underpan sensor. Pull down on the underpan to ensure the pan is not stuck in the activated position.
Platform comes down but does not go up	Check the power supply (breaker, cord, battery, etc.).
Platform does not move	<p>Check that the key is ON (if applicable).</p> <p>Check that the doors are closed.</p> <p>Check to see if the Emergency Stop is pushed in; it should be pulled out for normal operation.</p> <p>If the platform is at the top landing, check the underpan sensor as described above.</p>

6. MAINTENANCE

V1504 is subject to wear and tear from use. You must perform the checks and actions in the following tables to ensure safety and proper operation.

IMPORTANT

Savaria products are only to be installed, adjusted, serviced, or maintained by Savaria licensed dealers and technicians. Your Savaria product will have the warranty voided if a non-Savaria approved technician performs work on the Savaria product.


For units with high or excessive daily cycles, outdoor use, or use in harsh environments, inspection and maintenance should be conducted more frequently to ensure optimal performance.

IMPORTANT: Please test the phone in your elevator during every maintenance. If the phone is inactive, please shut down the elevator until the phone line is active. This applies to all lifts in a hoistway or enclosure models.



DANGER

Always use the shoring pins when working under the lift. For lower travel heights, insert the pins into the lower holes (at 600 mm).

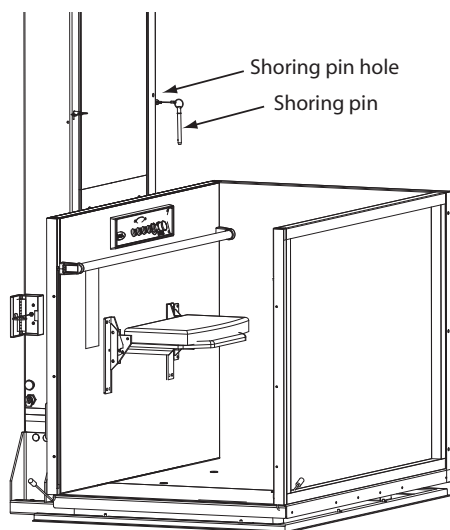Figure 4

Maintenance Schedule (General)

Verification	Frequency (Commercial/ Exterior)	Frequency (Residential)
For units with an interlock, the lift should not move if any door is not closed and locked. For units with a GAL lock, the lift should not move if any door is not closed. The lift should not move beyond the door zone (usually less than four inches away from the landing in either direction) if the door is not locked.	Every 6 months	Normal: Every Year Heavy: Every Year Excessive: Every 6 months
Verify the underpan is working. Be sure to insert the shoring pins.	Every 6 months	Normal: Every Year Heavy: Every Year Excessive: Every 6 months
Verify correct operation of the phone (where applicable).	Every 6 months	Normal: Every Year Heavy: Every Year Excessive: Every 6 months
Confirm doors or gates are all self-closing.	Every 6 months	Normal: Every Year Heavy: Every Year Excessive: Every 6 months
Check that the Stop button works correctly	Every 6 months	Normal: Every Year Heavy: Every Year Excessive: Every 6 months

<p>Verify the door lock operation:</p> <ul style="list-style-type: none"> • The lift is operational when the door is locked • The lift is NOT operational when the door is open at a landing • Insert the lock key to manually unlock the door and ensure the following: • The lift is NOT operational when the door is manually unlocked with the key • The key cannot be removed from the lock when the door is manually unlocked 	Every 6 months	<p>Normal: Every Year Heavy: Every Year Excessive: Every 6 months</p>
<p>Check the suspension system:</p> <ul style="list-style-type: none"> • Chains • Connecting links • Chain pulleys and shafts • Parts holding the chains on the roller supports • Chain tensioners on the rail (they should be tight) 	Every 6 months	<p>Normal: Every Year Heavy: Every Year Excessive: Every 6 months</p>
<ul style="list-style-type: none"> • Cylinder head (cotter pins, cracks, welds) • Up relays - if you have two up relays (solenoids or contactors), make sure one of them is not stuck in the activated position. Use a multimeter to verify that every N.O. contact is open when the relays are not being activated. 	Every 6 months	<p>Normal: Every Year Heavy: Every Year Excessive: Every 6 months</p>
<p>Check the safety brake.</p>	Every 6 months	<p>Normal: Every Year Heavy: Every Year Excessive: Every 6 months</p>

Check for oil leaks.	Every 6 months	Normal: Every Year Heavy: Every Year Excessive: Every 6 months
Check the rollers.	Every 6 months	Normal: Every Year Heavy: Every Year Excessive: Every 6 months
Ensure that all filler panels (aluminum, Plexiglas or glass) are securely fastened in the enclosure, doors and gates.	Every 6 months	Normal: Every Year Heavy: Every Year Excessive: Every 6 months

Maintenance Schedule (Adjusted)

Some Jurisdictions have their own state, county or local code that deviate from national code. Please fill out the below information with the requirements of your region:

Savaria Job Number: _____

Installation Address: _____

Verification	Adjusted
For units with an interlock, the lift should not move if any door is not closed and locked. For units with a GAL lock, the lift should not move if any door is not closed. The lift should not move beyond the door zone (usually less than four inches away from the landing in either direction) if the door is not locked.	
Verify the underpan is working. Be sure to insert the shoring pins.	
Verify correct operation of the phone (where applicable).	
Confirm doors or gates are all self-closing.	
Check that the Stop button works correctly	
Verify the door lock operation: <ul style="list-style-type: none"> • The lift is operational when the door is locked • The lift is NOT operational when the door is open at a landing • Insert the lock key to manually unlock the door and ensure the following: <ul style="list-style-type: none"> • The lift is NOT operational when the door is manually unlocked with the key • The key cannot be removed from the lock when the door is manually unlocked 	
Check the suspension system: <ul style="list-style-type: none"> • Chains • Connecting links • Chain pulleys and shafts • Parts holding the chains on the roller supports • Chain tensioners on the rail (they should be tight) 	

<ul style="list-style-type: none">• Cylinder head (cotter pins, cracks, welds)• Up relays - if you have two up relays (solenoids or contactors), make sure one of them is not stuck in the activated position. Use a multimeter to verify that every N.O. contact is open when the relays are not being activated.	
Check the safety brake.	
Check for oil leaks.	
Check the rollers.	
Ensure that all filler panels (aluminum, Plexiglas or glass) are securely fastened in the enclosure, doors and gates.	

V1504

Vertical Platform Lift

Owner's Manual

For service or questions about this product,
please contact your installing dealer.

Dealer Name: _____

Dealer Phone: _____

Authorized Savaria Dealer

Savaria Concord Lifts, Inc.
2 Walker Drive Brampton ON L6T 5E1 Canada



savaria.com

Part No. 000692 Rev. 030

©2023 Savaria Corporation