



fine art
meets function

Vuelift home elevators

 savaria



Architectural elegance

Change your perception of what a home elevator can be. The Savaria Vuelift takes the elevator out of the dark and into the light as the focal point of your home. A stand-alone solution that does not require a hoistway to be constructed, Vuelift ascends elegantly within existing architecture, making it an ideal choice for renovations. Or, allow Vuelift to inspire the design of your new residence. In any scenario, Vuelift is an elegant way to achieve peace of mind without compromising style – your investment in beauty and convenience for today also ensures mobility and independence for the future.

Panoramic views

Enjoy sweeping 360-degree views from your Vuelift, which can be crafted from either clear acrylic or low-iron silica glass for uncompromised clarity. The effect is a spacious-feeling cab that provides a comfortable, airy ride with spectacular vistas. Metal components are finished with lustrous powder-coat in virtually any color you can imagine to either blend with your home's décor, or provide dramatic contrast. Much more than a home elevator, Vuelift transcends convenience to deliver a ride that is an experience in itself.



State-of-the-art design

Your Savaria Vuelift is designed and constructed with care using reliable components to meet or exceed the strictest safety guidelines. Driven by an energy-efficient winding drum drive train system using two aircraft cables for a smooth ride, Vuelift requires minimal maintenance to provide you with dependable performance for years to come. A masterpiece of art and engineering, Savaria Vuelift offers function and beauty for those with the most discerning taste.

The finest materials

Quality is second to none when you choose a Vuelift. We use only premium clear acrylic panels, which far exceed code requirements for strength and will not discolor over time. Glass Vuelift models are crafted from crystal clear low-iron silica glass for ultimate clarity without a green hue. The result is a curator-pleasing aesthetic that earns pride of place in even the most distinguished homes.

Install with ease

Simplicity in design means a simple installation: your Vuelift elevator can be quickly installed with no mess and no fuss. Components fit easily through standard door openings, down narrow hallways, and up stairwells with no special lifting equipment required – this makes Vuelift an ideal choice to retrofit an existing home, or install in a luxury penthouse. While a 4" pit is recommended, Vuelift can be installed without a pit – with a small ramp or short step into the elevator at the lower level – and can be configured for travel up to 42.5 feet with as many as six stops.

vue

OCTAGONAL



Maximize space with the modern, unique octagonal prism shaped elevator that sparkles like a faceted crystal as the centerpiece of your home. VueLift Octagonal has a minimal footprint, allowing it to fit into existing stairwells or spaces where a standard elevator may not be possible. Fabricated from either ultra-strong clear acrylic with 840 lb capacity, or low-iron silica glass for up to 950 lb, it is suited for installations where a higher capacity is desired.



vuelift
ROUND

With graceful curves and a cylindrical hoistway, the Vuelift Round elevator makes a beautiful addition to the architecture of any home. While ideal for renovations, it can also be the centerpiece of a new home design: many architects place the cylindrical elevator within a spiral staircase, or mirror its elegant curves in other design elements.



Vuelift specifications

Key features


- Automatic operation
- Illuminated push-button hall call stations
- Bifold glass cab gate
- Balcony attachment or through-the-floor setup
- Integrated touch-pad phone
- Automatic on/off LED cab light and ventilation fan
- Textured semigloss black powder-coat frame

Safety features

- Emergency battery back-up for cab lighting and lowering
- Manual lowering
- Emergency alarm and stop switch
- Over-speed governor
- Safety brakes
- Elevator door interlocks
- In-use indicator lights on hall call stations

Optional features

- Panoramic cab ceiling
- White, silver, or custom powder-coat frame color
- Straight through or 90 degree entry/exit configurations
- Pitless with short ground floor ramp (acrylic only)
- Up to 6 stops

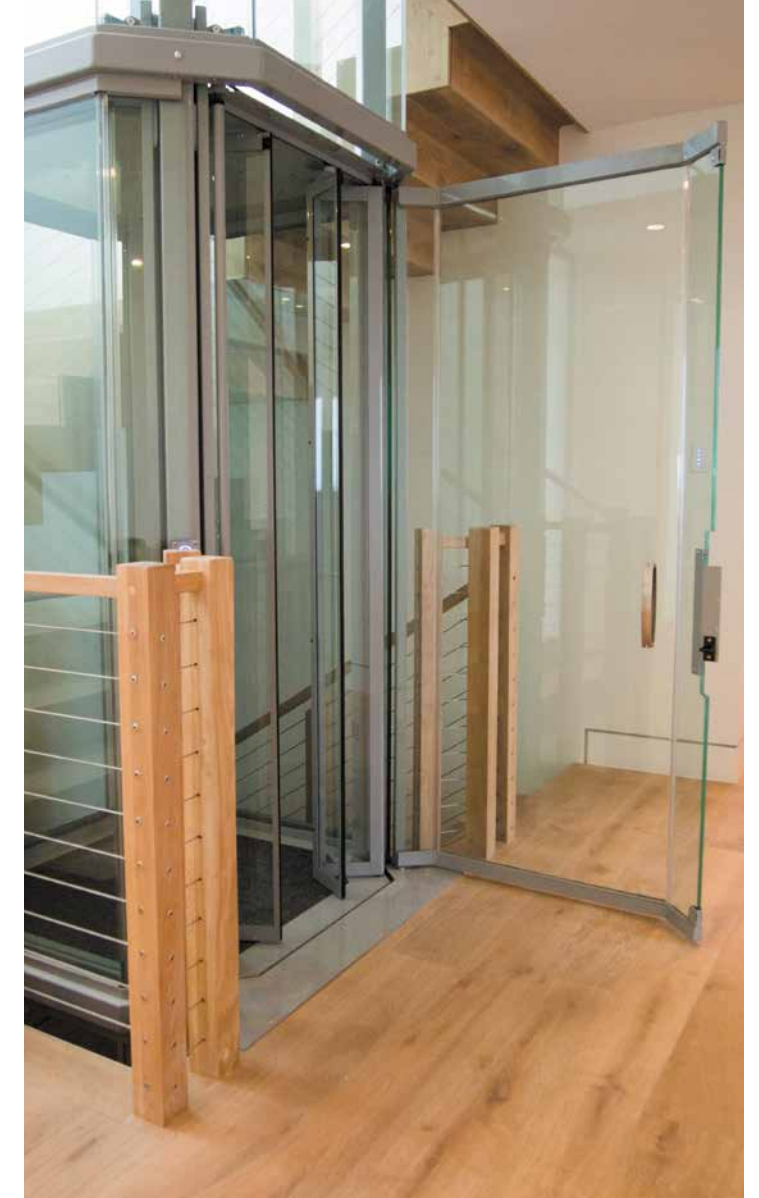

	Vuelift Round (Acrylic)	Vuelift Octagonal (Acrylic)	Vuelift Octagonal (Glass)
Capacity	840 lb (381 kg)	840 lb (381 kg)	950 lb (431 kg)
Nominal speed	32 fpm (0.16 m/s)	32 fpm (0.16 m/s)	40 fpm (0.2 m/s)
Drive/motor	Winding drum, 1.5 hp	Winding drum, 1.5 hp	Winding drum, 3 hp
Cab floor area	13.09 sq ft (1.22 sq m)	12.83 sq ft (1.19 sq m)	12.83 sq ft (1.19 sq m)
Footprint	54" Ø (1.37 m)	48" x 48" (1.2 m x 1.2 m)	48" x 48" (1.2 m x 1.2 m)
Standard overhead clearance	106" (2.69 m)	106" (2.69 m)	108" (2.74 m)
Optional short cab	96" (2.44 m) overhead - 76.5" (1.94 m) interior cab height		n/a
Interior cab height	84" (2.13 m)		
Maximum travel	42.5' (12.95 m)		
Pit depth	4"-12" (102-305 mm)		
Max. number of stops	6		
Power supply	30A, 230-V, single phase, 50/60 Hz		
Applications	Residential, indoors		
Warranty	36 month limited parts warranty		

better mobility for life

In business for over 30 years, Savaria designs, engineers and manufactures products to help people gain personal mobility. In addition to home elevators, we also offer a complete range of accessibility lifts for residential use and demanding commercial environments. While competitors have come and gone, Savaria has become an industry leader with a strong – and growing – portfolio of products. Our large network of authorized Savaria dealers provide expert installation and service. Call us to locate a dealer near you.

Authorized Savaria Dealer



2 Walker Drive Brampton ON L6T 5E1
tel: 800.661.5112 | fax: 905.791.2222
www.savaria.com