
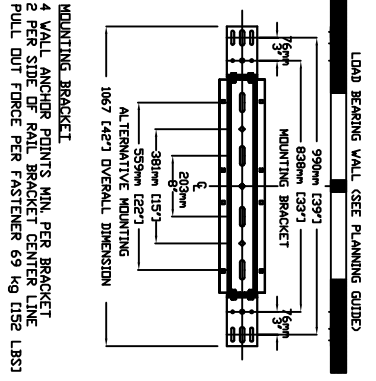


ECLIPSE AUTO SLIM DOORS Model TYPE 3-29 1/2"+SWING

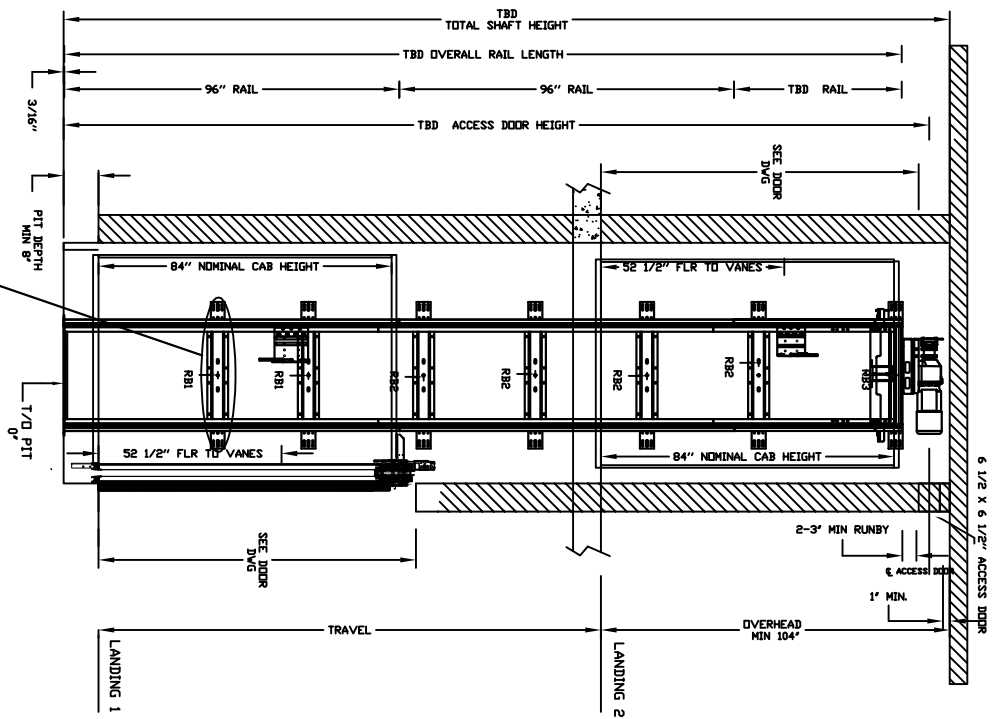

MOUNTING BRACKET
 4 RAIL SANDER POINTS MIN. PER BRACKET
 2 PER SIDE BRACKET CENTER
 FULL OUT FORCE PER FASTENER 69 KG [152 LBS]


LOAD BEARING WALL (SEE PLANNING GUIDE)

FINAL RAIL BRACKET	RB3	BELOW THE MOTOR CONSOLE REPRESENTATIVE FOR EXACT LOCATION
INTERMEDIATE RAIL BRACKET	RB2	32" [813mm] INTERVALS AFTER 2nd BOTTOM BRACKET
BOTTOM RAIL BRACKET	RB1	39" [991mm] & ABOVE PIT FLOOR

CANNOT HAVE HABITABLE SPACE BELOW PIT

RAIL FORCES

* R1	* R2
1382 KG [304 LBS]	882 KG [194 LBS]
RAIL ASSY WEIGHT: 245 lbs / 111 kg	
PIT FORCE: R3	
PIT FLOOR TO SUPPORT LOAD (INCLUDES IMPACT)	
2909 KG [6400 LBS]	

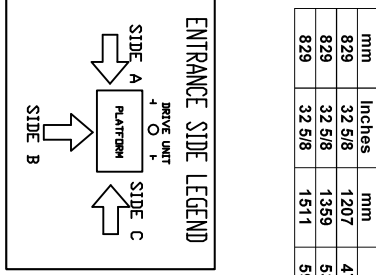

CLEAR INSIDE CAB WIDTH	CLEAR INSIDE CAB LENGTH	FINISHED RUNWAY WIDTH	FINISHED RUNWAY LENGTH	C RAIL CENTERLINE	D DOOR CENTERLINE	E DOOR CENTERLINE
mm	mm	mm	mm	mm	mm	mm
829	32 5/8	1511	59 1/2	1324	52 1/8	1702
mm	Inches	mm	Inches	mm	Inches	mm
829	32 5/8	1511	59 1/2	1324	52 1/8	1702

DOCUMENT REVISION 000, DATE: 03/03/17

RESIDENTIAL ELEVATOR

ECLIPSE SLIMS DOORS TYPE 3-29 1/2"+SWING

ALL INFORMATION IS SUBJECT TO CHANGE. PLEASE REFERENCE OUR ON-LINE DRAWINGS AT WWW.SAVARIA.COM FOR THE MOST RECENT UPDATES

THE INFORMATION DISCLOSED HEREIN IS THE EXCLUSIVE PROPERTY OF

savaria

SAVARIA WILL BE USED BY OTHERS WITHOUT WRITTEN CONSENT

SHEET # 1/1

CHARACTERISTICS

- CAB DOOR TYPE: AUTO SLIM 2 SPEED DOORS
- ENTRANCE DOOR TYPE: AUTO SLIM 2 SPEED DOORS
- 2 SPEED DOORS FINISH: PAINT OR STAINLESS STEEL
- FULLY AUTOMATIC OPERATION TO OPEN THE DOORS UPON ARRIVAL AT THE LANDING LIGHTWEIGHT ALUMINUM SILL
- EMERGENCY BACK-UP BATTERY SYSTEM
- INFRARED DETECTION SYSTEM TO RETRACT DOORS BEFORE HITTING AN OBSTRUCTION

