



6 X 6" ACCESS DOOR  
SEE NOTE C31

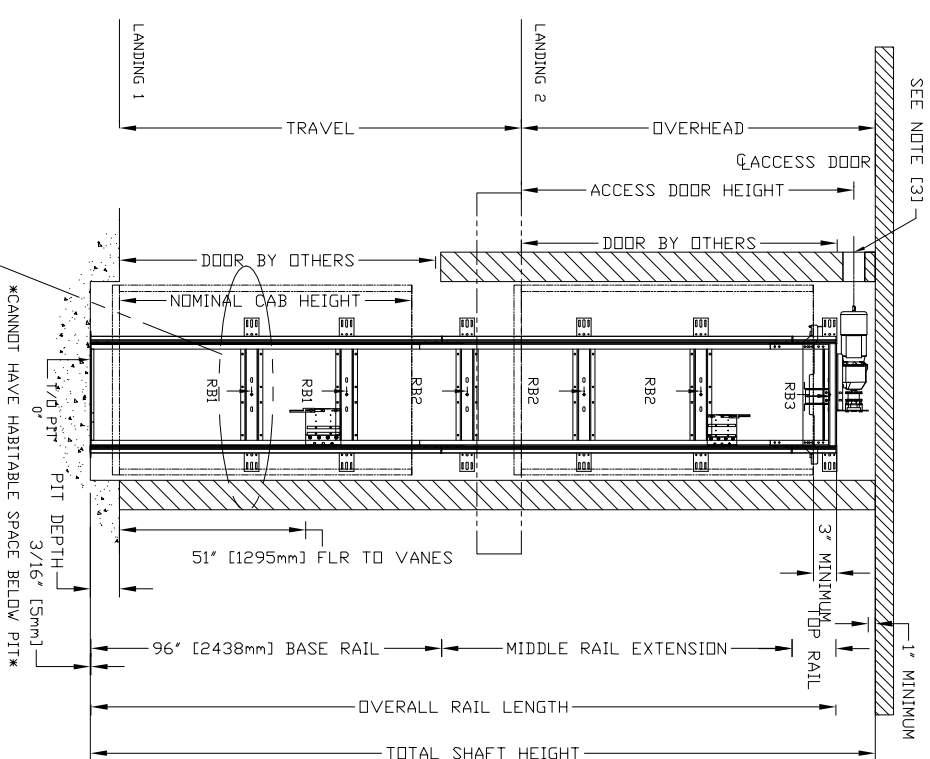



2 MOUNTING POSITIONS  
CENTER OR SIDE

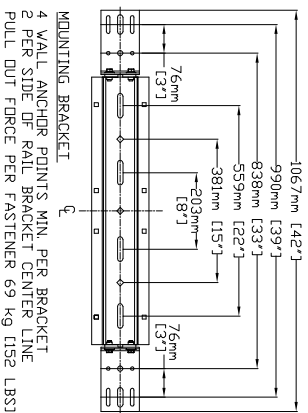


FINAL RAIL BRACKET RB3	BELOW THE MOTOR CONCORD REPRESENTATIVE FOR EXACT LOCATION
INTERMEDIATE RAIL BRACKET RB2	32" [813mm] INTERVALS AFTER 2nd BOTTOM BRACKET
BOTTOM RAIL BRACKET RB1	44" [1118mm] & 71" [1804mm] FLOOR

HALL BUTTON NEEDED AT ALL FLOORS

DOOR SWING

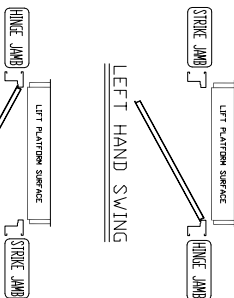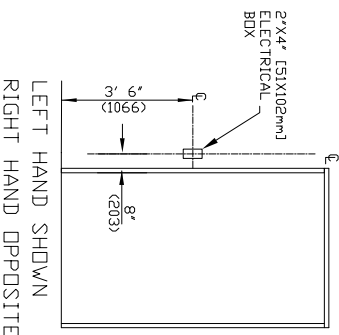

DOCUMENT REVISION 001 DATE: 10/09/08

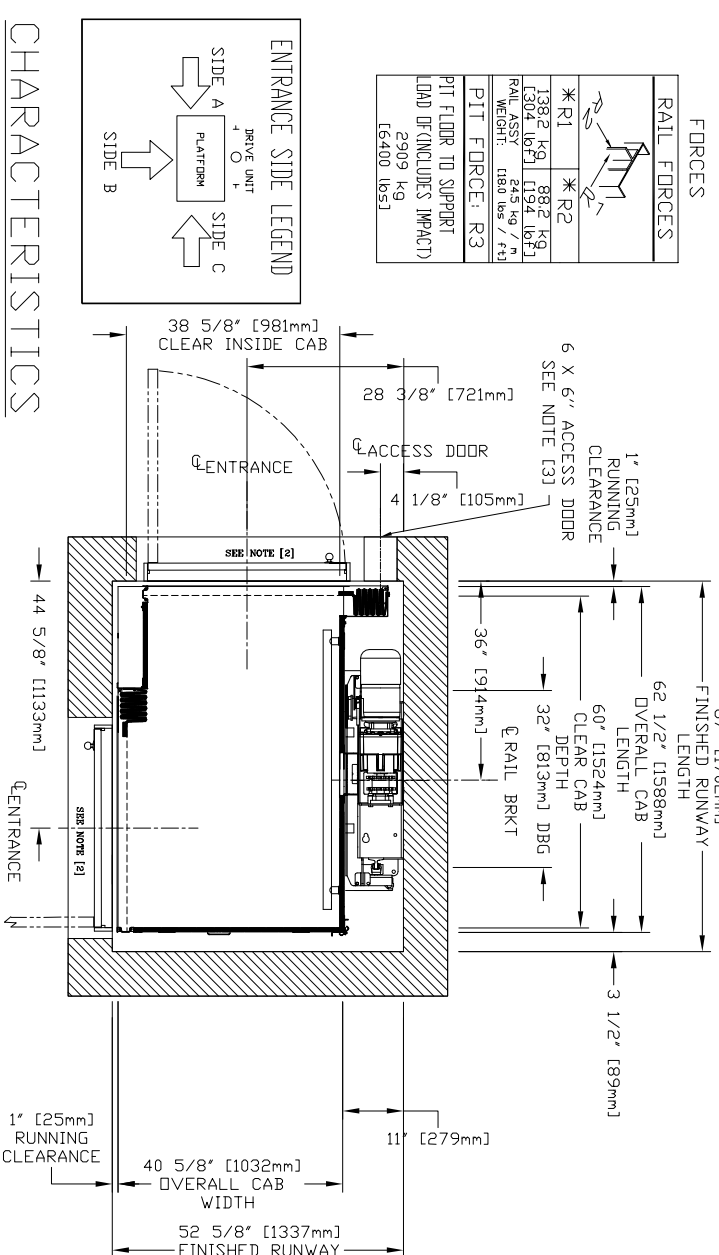

CHARACTERISTICS

GENERAL

APPLIED CODE: \_\_\_\_\_  
 CAPACITY: \_\_\_\_\_ (750, 1000 LBS)  
 NOMINAL SPEED: \_\_\_\_\_ 40 FPM  
 TRAVEL: \_\_\_\_\_  
 PIT DEPTH: \_\_\_\_\_ (MIN. 6")  
**CAR DETAILS**  
 CAB PANEL SELECTION: \_\_\_\_\_ (SEE CHART)  
 CEILING SELECTION: \_\_\_\_\_ (WITH MATCH)  
 CAB FLOORING: \_\_\_\_\_ (PLYW, FINISH)  
 FINISHED FLOOR THICKNESS: \_\_\_\_\_ (1/8 to 3/4")  
 CAB HEIGHT: \_\_\_\_\_ (80, 96")  
 CAB OPERATION: \_\_\_\_\_ (AUTO)  
 GATE TYPE: \_\_\_\_\_ (FOLD CLR, FOLD BRZ, BLK SCZR)  
**LOCKS/CALL STATIONS/TRAVEL/DOORS (BY OTHERS)**  
 TRAVEL: \_\_\_\_\_  
 ENTRANCE SIDE: \_\_\_\_\_  
 DOOR SWING: \_\_\_\_\_  
 LOCK TYPE: \_\_\_\_\_  
 AUTO DOOR OP: \_\_\_\_\_  
**STANDARD OPTIONS PROVIDED**  
 BUTTON MARKING: \_\_\_\_\_ NUMERIC (1 to 4)  
 HALL CALL KEYS: \_\_\_\_\_ NO  
 HALL CALL FINISH: \_\_\_\_\_ MATCH CAR STATION  
 HALL CALL SHAPE: \_\_\_\_\_ RECTANGULAR  
 EXTRA CABLE (REMOVED): \_\_\_\_\_ 0'  
 PREWIRE PACKAGE: \_\_\_\_\_ NO  
 CONTROLLER LOCATION: \_\_\_\_\_ EXTERNAL

PROVISIONS BY OTHERS

**\*HOISTWAY, CONSTRUCTION SITE, CLEARANCE**  
 1- HOISTWAY CONSTRUCTION AND PIT BY OTHERS. DUE TO LIMITED SPACE WITHIN THE HOISTWAY IT IS ESSENTIAL THAT THE PIT IS LEVEL AND WALLS ARE SQUARE AND PLUMB THROUGHOUT THE HOISTWAY. THE HOISTWAY FRAMING MUST BE WITHIN 13 mm (1/2") OF PLUMB AND SQUARE FROM TOP TO BOTTOM FOR PROPER OPERATION OF THE ELEVATOR THROUGHOUT THE HOISTWAY.  
 2- CLEARANCES FROM DOOR SILL TO HOISTWAY DOOR TO BE 76 mm (3") MAXIMUM AND WITH CSA B44 (ASME/ANSI A17.1) CONSULT YOUR LOCAL INSPECTION AUTHORITIES FOR CODES WHICH MAY TAKE PRECEDENCE.  
 3- HOISTWAY MUST HAVE A MINIMUM 152 mm x 152 mm (6" x 6") LOCKABLE ACCESS HATCH (PROVIDED BY SAVARIA CONCORD) LOCATED AT THE TOP OF THE HOISTWAY. LOCATION MUST BE IN AN AREA WHICH WILL PROVIDE ACCESS TO THE ELEVATOR DRIVE ASSEMBLY BY THE MANUAL LOWERING HANDLE. MANUAL LOWERING HANDLE WILL ENABLE USER TO OVERPOWER BRAKE AND LOWER CAR WITHOUT BODILY ENTRY TO THE SHAFTWAY.  
 4- THE PIT FLOOR SHALL BE CONSTRUCTED TO WITHSTAND AN IMPACT LOAD OF 2903 KG (6400 LBS) REF. CSA B44 SECTION 2.11. (ASME/ANSI A17.1 SECTION 106)  
 5- HOISTWAY TO BE FREE OF ALL PIPES, WIRING AND OBSTRUCTIONS NOT RELATED TO THE OPERATION OF THE ELEVATOR.  
 6- HOISTWAY CONSTRUCTION REQUIREMENTS MAY VARY FROM REGION TO REGION. DIMENSIONS GIVEN ARE MANUFACTURERS RECOMMENDED CLEARANCES. THEY REFLECT RUNNING AND ACCESS CLEARANCES. CONSULT YOUR LOCAL AUTHORITY TO ASSURE COMPLIANCE WITH PROVINCE AND LOCAL CODES.  
**\*DIMENSIONS WARNING**  
 CONTRACTOR/CUSTOMER TO VERIFY ALL DIMENSIONS AND REPORT ANY DISCREPANCIES TO OUR OFFICE IMMEDIATELY.  
**\*STRUCTURAL**  
 7- A LOAD BEARING WALL IS REQUIRED TO SUSTAIN RAIL REACTIONS AS SPECIFIED IN KEY TO RAIL REACTIONS ON DRAWING. BUILDING CONTRACTOR TO CONTACT STRUCTURAL ENGINEER TO DETERMINE IF SUPPORTING WALL WILL SUSTAIN RAIL REACTIONS.  
 8- SUITABLE LINTELS MUST BE PROVIDED BY OWNER/AGENT.  
 9- ALL FULL HEIGHT DOORS MUST BE ALIGNED WITH THE DOOR CENTERLINE SHOWN ON PLAN DETAIL. RECOMMEND INSTALLING A SOLID CORE 2032 mm (6'-8") HIGH DOOR WITH A MINIMUM CLEAR OPENING OF 813 mm (2'-8") WIDE.  
 10- DOOR HANDLE AND LATCH SET REQUIRED FOR ALL FULL SIZE DOORS.  
 11- SEE INSTALLATION MANUAL FOR DETAILS ON THE INTERLOCKS. INTERLOCKS ARE REQUIRED FOR ALL FULL SIZE DOORS.  
**\*ELECTRICAL**  
 12- THE ELEVATOR CONTROLLER IS 620 mm (24.4") WIDE X 584 mm (23") HIGH X 170 mm (6.7") DEEP. THE CONTROLLER IS PROVIDED BY SAVARIA CONCORD AND IS EITHER A. ATTACHED TO THE RAIL WALL INSIDE THE HOISTWAY BETWEEN THE 7" RAILS WITH ACCESS EITHER UNDER THE CAB OR THROUGH THE CAB OF THE ELEVATOR; OR B. IN A REMOTE LOCATION EXTERNAL TO HOISTWAY, THAT NEEDS PROPER STRUCTURAL WALL TO SUPPORT THE CONTROLLER ON ALL 4 CORNERS HOLES POSITION ARE = 597 mm (23.5") WIDE BY 546 mm (21.5") HIGH.  
 13- ARRANGE FOR A POWER SUPPLY WITHIN SIGHT OR NEXT TO THE ELEVATOR CONTROLLER PRIOR TO DELIVERY OF THE UNIT(BOTH 115 VOLT AND 208/240 VOLT). THE 208/240 VOLT CIRCUIT SHALL ORIGINATE FROM A LOCKABLE & POLE FUSED DISCONNECT (20 AMP RK 3 RATED) FUSED LOCATED NEAR THE RESIDENCES. INCLUDING ELECTRICAL PANEL THE ELECTRICAL CIRCUIT PROVIDED FOR THE CONTROLLER SHALL BE 208/240 VOLT, SINGLE PHASE, DERIVED FROM THE NEUTRAL AND GROUND SERVICE WIRE. MUST BE VOLT FEED (5 AMP SERVICED CAR) WITHIN 1000 mm (39") OF THE CONTROLLER. ALL ELECTRICAL IS REQUIRED INSIDE THE HOISTWAY OR IN SIGHT OF THE CONTROLLER. ALL DISCONNECT IS DISCONNECTED SHALL BE PROVIDED AND INSTALLED BY OTHERS (MUST COMPLY WITH APPLICABLE CODES).  
 14- FIELD ELECTRICAL WIRING AND CONNECTIONS TO HALL-CALLS, PIT SWITCH AND INTERLOCKS ARE PROVIDED.  
 15- THE ILLUMINATION SHALL BE NOT LESS THAN 200 LX (9 FC) AT THE FLOOR LEVEL IN ALL MACHINE ROOMS AND HOISTWAY SPACES. THE SWITCH FOR THE LIGHT MUST BE WITHIN 457 mm (18") OF THE HOISTWAY ACCESS. THE LIGHT MUST BE GUARDED TO PREVENT ACCIDENTAL BREAKAGE OR CONTACT WITH THE HOT BULB. THE SWITCH, LIGHT, AND GUARD ARE PROVIDED AND INSTALLED BY OTHERS. (MUST COMPLY WITH APPLICABLE CODES).  
 16- IF A TELEPHONE CIRCUIT IS REQUIRED OPTION FOR ELEVATOR JACK IS PROVIDED AND INSTALLED BY OTHERS. THIS CIRCUIT SHALL BE BROUGHT TO A LOCATION NEXT TO THE CONTROLLER AND BE AVAILABLE TO CONNECT AND TEST UPON ELEVATOR INSTALLATION.  
**\*WHEN CONTROLLER EXTERNAL**  
 17- LOCATION / ACCESS - CONTROLLER ROOM LOCATED AT THE LOWEST LEVEL ADJACENT TO HOISTWAY. UNLESS SHOWN OTHERWISE ON THE LAYOUT DRAWINGS. FIELD ADJUSTMENT BY INSTALLER MAY BE NECESSARY TO MEET JOB SITE CONDITIONS OR REGULATIONS. ACCESS TO CONTROLLER ROOM TO BE THROUGH A SELF CLOSING LOCKABLE DOOR WHERE CODE CONSIDER IT AS A MACHINE ROOM.  
**\*WHEN APPLICABLE SLEEVES FOR ELECTRIC LINES-**  
 18- FROM CONTROLLER ROOM TO RUNWAY AS REQUIRED.  
 POSITION PER INSTALLERS INSTRUCTIONS.  
**\*CODE**  
 19- ALTHOUGH THE ELEVATOR IS DESIGNED TO MEET CSA B44 (ANSI A17.1), LOCAL CODES MAY VARY. DEALER IS RESPONSIBLE FOR COMPLYING WITH LOCAL CODES.  
**NOTE A**  
 ALL COMPONENTS WEIGHTS CAN BE FOUND IN THE PLANNING GUIDE  
**NOTE B**  
 ALL INFORMATION IS SUBJECT TO CHANGE.  
 PLEASE REFERENCE OUR ON-LINE DRAWINGS AT  
 www.savariaconcord.com FOR THE MOST RECENT UPDATES

RESIDENTIAL ELEVATOR

ECLIPSE MODEL 36X60 TYPE 4

CUSTOMER:	DATE:
PROJECT:	REVISION DATE:
LOCATION:	COMPLETED BY:

