



Suitable for virtually any architectural requirements including public spaces and home use

Ideal for indoor or outdoor applications from basic installations to large-scale, complex projects

Finish options including frameless glass for the ultimate in luxury for upscale commercial applications

Savaria® V-1504 Vertical Platform Lift

VERSATILITY FOR ANY APPLICATION



The Savaria V-1504 vertical platform lift is built to carry a wheelchair and passenger safely up and down one or more levels.

Suitable for installations in public and commercial buildings, as well as private homes, this Savaria lift features an extremely versatile design that can be configured and customized to suit virtually any project requirements and aesthetic needs. From the rugged outdoors, to the most luxurious office tower lobbies, the Savaria V-1504 lift is ready to serve with its reliable performance, ease of use and range of finish options.



SAVARIA® V-1504 VERTICAL PLATFORM LIFT

The Savaria V-1504 vertical platform lift is available in a range of base models, all with options and configurations for customization to your needs.

STANDARD (V-1504 STD)

Ideal for basic commercial applications and home use, this lift can be used indoors and outdoors to travel a standard 48" with 2 stops or optionally more distance and stops. The standard unit can also be installed inside a constructed hoistway.

ALUMINUM/ACRYLIC MODEL (V-1504 ALPE)

The aluminum enclosure model can be ordered with an outdoor package that features zinc-coated corrosion resistant steel parts. The acrylic model can be optionally ordered with tempered or laminated glass inserts. The active ventilation system keeps the inside comfortable and the gates and door can be motorized.

LUXURY FRAMED (V-1504 LUX)

The Lux features an enclosure frame with stainless steel No. 4 finish and tempered or laminated glass inserts, making it a beautiful complement for lobbies and interior public buildings.

PRESTIGE FRAMELESS (V-1504 PRESTIGE)

The two-stop Prestige lift features 1/2" structural tempered or laminated glass with almost invisible framing. The tower can be finished in stainless steel or custom powder coat, making this lift the ultimate statement for barrier-free access in interior settings.

Installation notes:

- 1 Interior application with optional black powder coat. Upper landing gate with glass insert.
- 2 Unenclosed, indoor application in optional white with platform gate and acrylic insert. (courtesy of Eastern Elevator)
- 3 Prestige Frameless model with tempered glass and stainless steel. (courtesy of Mobility Elevator & Lift)
- 4 Hoistway application with melamine antique white cab panels.
- 5 Tall enclosure with acrylic inserts, shown in standard beige, outdoor stadium application.
- 6 Aluminum enclosure with outdoor package and full-sized door. (courtesy of Access Lifts & Service)

Every Savaria V-1504 model is driven by our reliable hydraulic system and can be configured specifically for your needs. The lift travels up and down a rail system enclosed in the lift tower. The tower is supported with attachment to an existing wall support or through a constructed hoistway. Because the drive system is contained within the lift tower, no additional machine room is required for installation.

SMOOTH HYDRAULIC 2:1 CHAIN DRIVE SYSTEM

The lift provides a high efficiency, reliable and comfortable ride.

LARGE PLATFORM FOR EASY ACCESS

The standard platform is 36" by 54" (ADA compliant), and custom platform sizes are also available. The non-skid surface provides added safety.

FLEXIBLE DESIGN

Configure up to 23' of travel distance* with up to four stops, with a full range of entrance and exit configurations available.

EXTENSIVE FINISH OPTIONS

Choose standard beige powder coat, select from the optional color finishes, or even request your own custom color. Enclose your lift with acrylic or glass panels.

EMERGENCY BACK-UP SYSTEMS

In addition to a manual lowering system, the lift features a DC battery powered lowering system for use in the event of a power failure. Optionally, a battery back-up operating system can be added to allow full functionality of the lift for emergencies.

EASY OPERATION

On-board controls operate the lift easily with constant pressure. Optional call/send stations can be added with or without key access. Add an optional joystick, 60 mm buttons, or additional operating panel to add even more flexibility for user needs.

MACHINE ROOMLESS

The Savaria V-1504 does not require a machine room to house the drive component, simplifying the installation process. Alternatively, the drive system can be located in a remote machine room for ultra-quiet operation.

** consult your authorized Savaria dealer for complete specifications applicable to your local code requirements*

Savaria® V-1504 Vertical Platform Lift

VERSATILITY FOR ANY APPLICATION



ADDITIONAL OPTIONS


Choose from a variety of doors and gates, including a platform gate, top landing gate, or full-sized upper or lower landing doors with optional acrylic or glass inserts. Add motorized operation, weather-resistant lock, fire-rated, or wooden doors.

Other options include ADA hands-free phone, folding seat and 60 mm buttons, as well as full battery back-up operation. Add Savaria Link wifi diagnostic system for faster dealer troubleshooting. The Savaria One Touch Alert System provides two-way voice communications using a pre-paid, owner-supplied nano sim card.

A variety of paint colors and textures are available including custom RAL colors. Please consult your local dealer for a full list of options available for your application.

SPECIFICATIONS

Applications	Residential, commercial, indoor, outdoor
Capacity	750 lb (340 kg)
Maximum travel distance	23' (7 m), 12' to 14' (3.65 to 4.26 m) in some jurisdictions
Platform sizes	36" x 54" (914 mm x 1371 mm) ADA-compliant, (customize up to 17.5 sq.ft. /1.63 sq. m) Type 1, 2 only
Nominal speed	20 ft/min (0.1 m/s)
Levels/stops	2 to 4 stops
Car access/configurations	Enter/exit same side, 90 degree, straight through entry/exit
Power supply	110 volt, 20 amp, single phase, 60 Hz
Drive system	2:1 roller chain, hydraulic
Motor pump	3 hp, gear-type
Controller	Relay logic
Emergency operation	Battery-operated lowering with automatic recharging system, plus remote access manual lowering valve, optional battery backup
Rail construction	8' modular guide rail assembly with roller guide shoes
Side guards	42 1/8" (1070 mm), 80" (2032 mm) optional
Finish	Beige powder-coated steel, optional and custom colors available
Warranty	36 months parts, ask for details

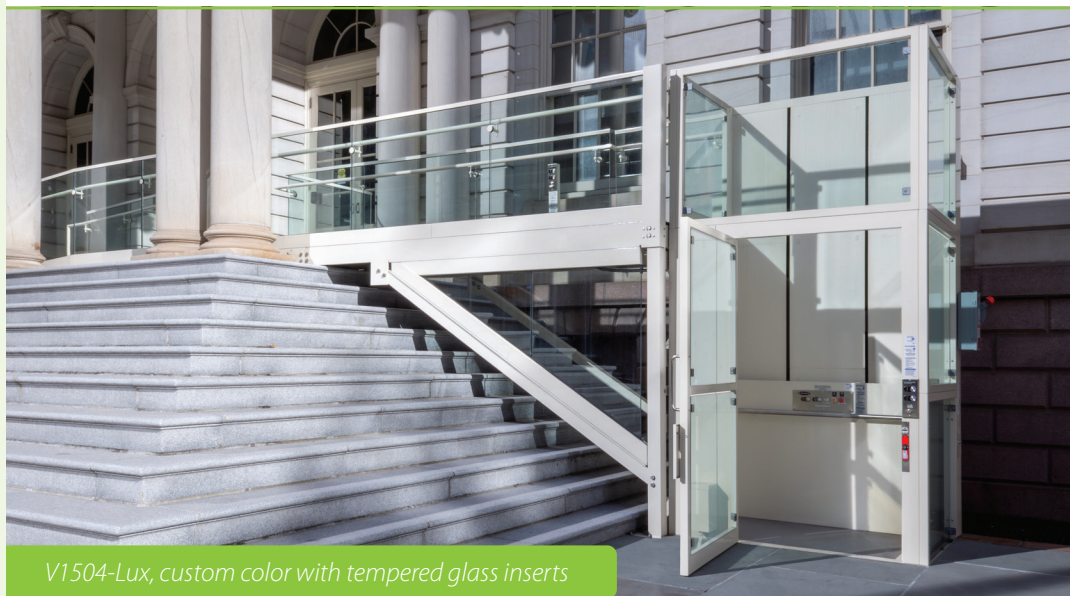

V1504-Lux, custom color with tempered glass inserts

Authorized Savaria dealer:



savaria.com

2 Walker Drive Brampton ON L6T 5E1 Canada

tel: 1.855.728.2742

Savaria makes every effort to publish accurate information. Some specifications, options or features may vary by market or change without notice.

©2025 Savaria Corporation.