





two drive systems

Orion® MRL geared traction drive

Requiring no machine room¹ and minimal overhead space, the Orion MRL drive is well suited for buildings where space is at a premium. It is also ideal for applications where more frequent trips are expected, providing up to 200 trips per day. The Orion MRL installs quickly and provides a smooth and stable ride with whisper-quiet operation.

The Orion MRL is also an environmentally-friendly choice. The geared traction counterweight system reduces motor effort, and therefore power consumption. No hydraulic fluid is required, eliminating the need for a costly oil separator in the floor drain.

Orion hydraulic drive

Our reliable hydraulic package has made the Savaria Orion North America's best-selling LU/LA elevator, and an industry mainstay for nearly 20 years. The high-efficiency system is compatible with the use of LEED-qualified Hydro Safe hydraulic vegetable oil.

With a flexible machine room location, the components can be located where best suited to the building. In the unlikely event of an emergency, simply pull a valve located in the machine room and the cab gently descends to the lowest landing.

¹ code may require controller in a separate machine room, consult dealer








Orion®17

Modern cab

The Orion17 modern cab is clad in fire-rated laminate overlay panels in one of three contemporary colors, framed in stainless steel. Stainless steel cab doors, fixtures and dropped ceiling add elegance while six silver pot lights and additional ambient lighting complete the look. The Orion17 modern package is available in three standard sizes for type 1 and 2 configurations.

Orion17 cab shown with gray panels



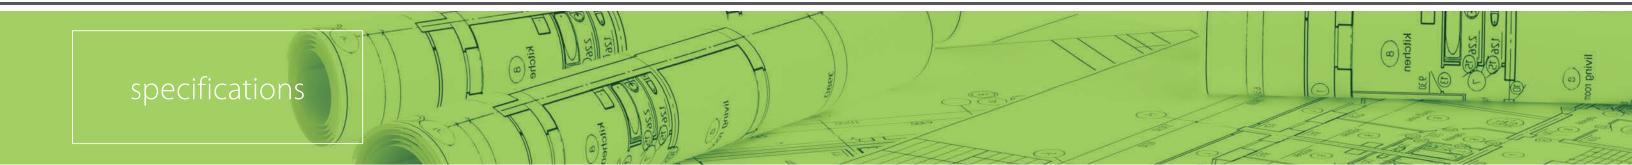

Standard specifications

- For commercial limited use/limited application (LU/LA), or residential use (where code permits³)
- Capacity: 1400 lb (635 kg)
- Standard 2 stop operation can be increased to 6 stops² over a maximum of 25 ft (7620 mm); higher travel available where code permits
- Running speed: 30 ft/min (0.15 m/s)
- Commercial-grade stainless steel hall calls, COP and handrail
- Illuminated indicators for the cab operating panel and hall call stations
- Automatic cab on/off lighting
- Traditional cab design with architectural white fire-rated steel panel cab interior and ceiling
- Two-speed steel cab doors with infrared closing sensors in black, architectural white or stainless steel (upgrade on classic cab); automatic landing doors are finished with primer
- Power supply: 208 volt, three phase, 30 amps, 60 Hz; or 240 volt, single phase, 40 amps, 60 Hz
- Lighting supply: 120 Volt, 15 Amps, 60 Hz
- Pit depth of 14" (355 mm)
- Minimum overhead:

Existing buildings

Hydraulic: 108" (2743 mm), or 110" (2794 mm) for Orion17 cab MRL: 111" (2820 mm), or 113" (2870 mm) for Orion17 cab

New build 134" (3404 mm) per code

• 36 month limited parts warranty

Safety features

- Emergency battery back-up for floor-specific lowering and interior lighting
- Alarm button and emergency stop key
- Manual lowering
- Slack rope safety switch
- Safety brakes
- Overspeed valve (hydraulic) or overspeed governor (MRL)

Drive systems

- Orion: 1:2 cable hydraulic, 5 hp submersed motor using aircraft cable, rope wedge sockets
- Orion MRL: counterweight traction, geared motor 1:1 sheave using elevator traction cables, rope wedge sockets

Optional features

- Traditional cab: fire-rated plastic laminate raised panels in a variety of colors on architectural white or black steel cab
- Full stainless steel cab (304 brushed number 4)
- Orion17 modern cab package: fire-rated laminate overlay panels in choice of color, framed in stainless steel; stainless steel cab doors and dropped ceiling
- Optional landing door finishes: architectural white, black, custom color, or stainless steel
- Brushed brass fixtures
- Hands-free phone
- Fire recall service
- Package for 2010 code and above: phone line detection, sheave guard, oil tank temperature sensor (hydraulic)

Cab sizes and configurations³

Cab size	Type 1	Type 2	Type 3	Type 4
TRADITIONAL CAB				
42" x 54" (1067 mm x 1372 mm)	•	•		
42" x 60" (1067 mm x 1524 mm)	•	•		
48" x 54" (1219 mm x 1372 mm)	•	•		
51" x 51" (1295 mm x 1295 mm)			•	•

ORION17 MODERN CAB

ORIGIN 17 MODERIN CAD				
42" x 54" (1067 mm x 1372 mm)	•	•		
42" x 60" (1067 mm x 1524 mm)	•	•		
48" x 54" (1219 mm x 1372 mm)	•	•		
	Type 1	Type 2	Type 3	Type 4

³ code restrictions may apply, consult your local Savaria dealer for details

Your local authorized Savaria dealer can ensure that your Orion elevator is installed to comply with local and national codes.

better mobility for life

In business for over 30 years,

Savaria is a global leader in the accessibility industry.

Savaria designs, manufactures and distributes products to help people gain mobility at home and in public spaces, and has one of the most comprehensive product portfolios on the market.

In addition to LU/LA elevators, we also offer home elevators and a complete range of accessibility equipment – such as wheelchair lifts and stairlifts – for demanding commercial environments and residential use.

Our large network of authorized Savaria dealers provide expert installation and service.

Call us to locate a dealer near you.



2 Walker Drive, Brampton, ON L6T 5E1 Canada

800.661.5112

+1.905.791.5555

savaria.com

Authorized Savaria Dealer