

luxury &  
convenience

home elevators by

 savaria.





elevate  
your home

#### Brand matters.

Savaria is an industry leader in both commercial and residential accessibility, with thousands of home elevator installations around the globe. Time-tested quality for years of use. Engineered for your needs. Built for your style. It's stylish, barrier-free living for convenience today—and tomorrow.



**Cab features**  
custom wall panels,  
blackened stainless  
steel fixtures, black  
framed Auto Slim  
gates and doors



**Cab features**  
raised red oak  
hardwood with  
walnut stain, bronze  
anodized aluminum  
fixtures and Luxury  
Flush Door

### Zenith

#### The top of the line

The Savaria Zenith is our whisper-quiet traditional home elevator. Based on our commercial-grade Orion MRL elevator, the robust Zenith features a unique geared traction counterweight design. Requiring only a small space in a closet for components, the elevator can be installed without a traditional machine room.

### Infinity

#### The smooth operator

The Infinity's precision hydraulic drive system is dependable and provides a smooth and consistent ride. Compatible with the use of LEED®-qualified Hydro Safe hydraulic vegetable oil. This design houses drive components in a machine room that can be located where best suited in your home.

### Eclipse

#### The best-seller

The Savaria Eclipse is our most popular home elevator, and a low-maintenance, cost-effective choice. Its modular design and durable geared chain drive install quickly, provides a stable ride and does not require a separate machine room. An environmentally-friendly counterweight system reduces motor effort and power consumption.



it's all  
about  
choice

**No compromise on style.**

From standard to fully custom, options abound to style your Savaria home elevator cab as you like it. With one of the widest selections of factory finishes, you'll find just the right touch for your taste—from sleekly modern to detailed traditional looks.

**Cab features**  
red luxury MDF with  
architectural white  
powder coat fixtures  
and bright white  
framed Auto Slim  
gates and doors


Your Savaria home elevator includes a choice of melamine wall finishes, with upgrade choices that include luxury MDF, raised hardwood panels, or unfinished flat veneer—all in on-trend color palettes. Ask your local Savaria dealer about customization options like stainless steel cabs and glass observation panels.



## a touch of tech

The Savaria touch screen COP (cab operating panel) provides control for the operation of your home elevator for desired floor, door opening and alarm functions on the large glass screen. Animated themes show the movement as the elevator travels floor-to-floor.

Choose your theme to suit your décor, or even your mood of the moment with a simple swipe. You can customize the landing names for your home when you order your elevator.

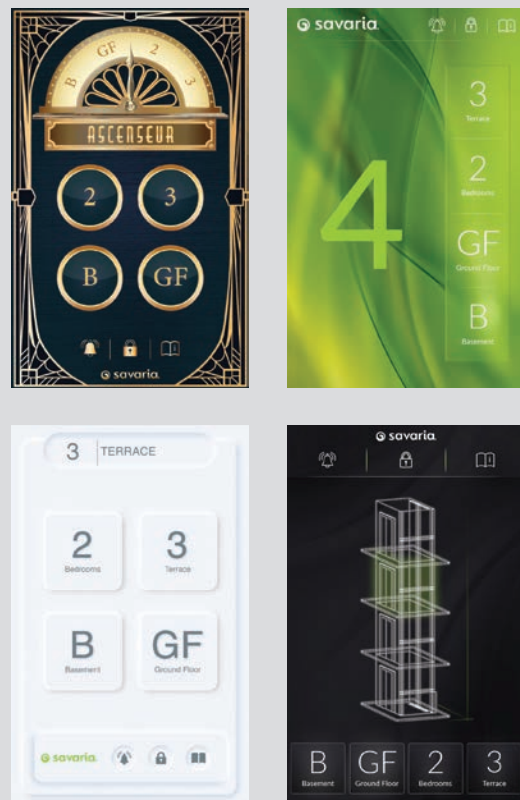

From the simplicity of white to botanical green, vintage art deco, or the drama of architectural black, there's a theme for your style. Customized for the number of stops and landing names in your home, each theme features animated actions.



## Finish it your way


Choose metal fixtures in standard bronze or clear anodized aluminum, or architectural white powder coat. Or upgrade your ride to stainless steel, blackened stainless or brushed brass. Each Savaria home elevator fixture package includes cab operating panel, handrail, ceiling lights and hall call stations with a choice of shape and position indicator.



**Cab operating panels (COP)**  
With phone keypad or One Touch Alert



Choice of ceiling light trim finishes

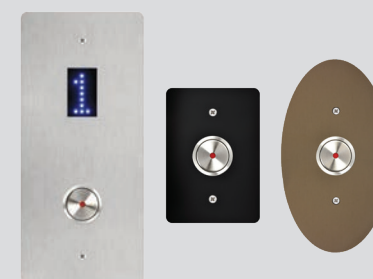

Choice of hall call finishes and shapes, or upgrade with floor position indicator



## Handrails

- (A) Stainless steel *upgrade*
- (B) Brushed brass *upgrade*
- (C) Blackened stainless steel *upgrade*
- (D) Architectural white powder coat
- (E) Bronze anodized aluminum
- (F) Clear anodized aluminum



a great first impression

Doors and gates are an integral part of your Savaria home elevator's style and safety. Choose our metal or framed glass Auto Slim doors for an elegant touch of industrial chic. Or opt for our bi-fold or accordion gates, perfectly complemented with our Luxury Flush landing doors.



Slim doors

Our slim doors provide fully automatic operation, using similar technology to a commercial grade elevator.



Accordion gates

Featuring a sturdy hard hinge to prevent deflection, accordion gates tuck away for an unobstructed entry.



Bifold gates

A simple, automatic solution for cab doors, our bi-folds offer a clean look whether open or closed, inside or outside the cab.

Accordion and bi-fold gates require landing doors, installed not to exceed the maximum distance from the elevator cab, under the A.17.1 elevator safety code.

All of our door and gate options are available in a variety of colors and styles to complement your home's design aesthetic.



Design your own cab



**Cab features**  
luxury MDF in snow white with blackened stainless steel fixtures, and Luxury Flush Door

Our Luxury Flush Door gives you the safety you need, and the style you want

Choose our Luxury Flush Door, the ideal code-compliant swing door solution that eliminates the potential for safety hazards between the door and the elevator cab gate and meets A.17.1 code. No need for worry about door gaps, or ordering a custom door to meet the 3/4-4 rule in the code. The Savaria Luxury Flush Door features a seamless aluminum frame with tuck-in channels for smooth edges and concealed safety interlocks and hinges for a clean look. An interior safety release allows for easy emergency egress, while the call station can be integrated into the door frame for a modern touch. Also available as a frame-only option, so you can match the door with others in your home, or create your own distinctive landing door look.



# specifications

### Standard specifications

- Capacity: 750 lb, 950 lb, 1000 lb or 1400 lb (Zenith or Infinity HD only, code permitting)
- 2 stops with up to 10' of travel (optional up to 6 stops over 50' of travel)<sup>1</sup>
- Fully automatic operation
- Nominal speed: 40 ft/min (Zenith, Eclipse) or 36 ft/min (Infinity)
- Illuminated automatic push button operation on hall call stations; in-use indicator lights
- Digital display (floor and directional indicator) car operating panel (COP)
- Available alpha numeric button marking
- Homing feature
- 80" or 84" cab height
- ¾" melamine or unfinished MDF cab trimmed in black, clear or bronze anodized aluminum
- Surface-mount telephone
- 36-month limited parts warranty

### Safety features

- Certified elevator door locks
- Emergency battery back-up for cab lighting and lowering
- Powered emergency lowering (Zenith); emergency manual lowering with hand crank (Eclipse) or valve (Infinity)
- Audible “beep codes” cue user if action needs to be taken for unit to operate (e.g. close landing door)

### Drive systems

- Zenith: counterweight traction with geared motor 1:1 sheave, three 0.4" diameter elevator traction cables; slack cable safety device
- Eclipse: energy efficient variable speed 2 hp motor drive with motor brake and slack chain brake system
- Infinity: self-contained submersible hydraulic pump and 3 hp motor; various speed valve with soft start/stop

### Optional features






- Running speed up to 50 ft/min (Eclipse and Zenith only), where code permits
- Automatic Slim Doors available for 84" or 96" cab heights, in 29.5" and 35.5" clear opening configurations
- Bifold gates
- Power gate and power door operators
- Digital display hall calls
- Keypad phone or phone box
- Savaria One Touch Alert for emergency calls
- Savaria Touch Screen COP
- Savaria Luxury Flush Door or frame-only option
- Savaria Link Wi-Fi monitoring for remote troubleshooting by the dealer

### Additional Eclipse options

- Upgraded roller guides for a smoother ride
- Counter-weight safety brakes (necessary when habitable space is below elevator)

### Configuration options

- Custom cab height up to 96" (overhead will vary)
- Concurrent landings/openings
- Zenith and Eclipse HD: cab size over 15 square feet (up to 48" wide), and capacity up to 950 lb; cabs with clear width over 42" and automatic slim doors have steel cab with choice of overlay panels
- Infinity HD: cab size up to 54" wide, and up to 1400 lb capacity

ECLIPSE	Type 1		Type 2		Type 3		Type 4		Type 5	
Cab size	width	depth	width	depth	width	depth	width	depth	width	depth
36" x 48"	50 ½"	55"	50 ½"	55 ½"	52 ⅝"	55"	52 ⅝"	55"	52 ⅝"	56 ¼"
36" x 54"	50 ½"	61"	50 ½"	61 ½"	52 ⅝"	61"	52 ⅝"	61"	52 ⅝"	62 ¼"
36" x 60"	50 ½"	67"	50 ½"	67 ½"	52 ⅝"	67"	52 ⅝"	67"	52 ⅝"	68 ¼"
40" x 54"	54 ½"	61"	54 ½"	61 ½"	56 ⅝"	61"	56 ⅝"	61"	56 ⅝"	62 ¼"
										

Drawings and dimensions for reference only, not to be used for construction. Refer to planning guide for Zenith and Infinity measurements.

### Zenith requirements

- Power supply: 240 volt, single-phase, 40 amps, 60 Hz
- Lighting supply: 120 volt, 60 Hz, 15 amps
- Pit depth: 10" minimum
- Overhead: 108" for 80" and 84" cabs; 120" for 96" cab

### Eclipse requirements

- Power supply: 230 volt, single phase, 60 Hz, 30-amp fused disconnect box with 20-amp fuse
- Lighting supply: 120 volt, 60 Hz, 15 amps
- Pit depth: 8" recommended, but as shallow as 6" is possible; 10" required for HD model
- Overhead: 96" for standard 80" cab; 100" for 84" cab; 112" for 96" cab

### Infinity requirements

- Power supply: 230 volt, single-phase, 30 amps, 60 Hz (208 volt, three-phase, 30 amps, 60 Hz possible—check with local dealer)
- Lighting supply: 120 volt, 60 Hz, 15 amps
- Pit depth: 8" minimum; 12" for HD model
- Overhead: 92" for standard 80" cab; 96" for 84" cab; 108" for 96" cab

### Savaria One Touch Alert

A simple push button on the operating panel of the lift places a call to a pre-programmed emergency contact list. This provides easy two-way communications. This feature requires an owner-supplied prepaid nano SIM card<sup>2</sup> installed by the local dealer.



<sup>1</sup> Zenith and Eclipse models can be customized to 60' of travel in some jurisdictions, ask your Savaria dealer for details

<sup>2</sup> Not compatible with 5G or eSIM cards

# better mobility for life

Savaria is a global leader in accessibility that designs, engineers and manufactures products to empower personal mobility.

We offer one of the broadest accessibility portfolios in the world, ranging from simple straight stairlifts to luxury panoramic glass home elevators, wheelchair lifts and commercial accessibility elevators, through safe patient care solutions—all backed by our in-house R&D and the experience that comes from having thousands of installations around the globe.

Our large network of authorized Savaria dealers provide expert installation and service.



Get inspired with  
interactive case  
studies and design  
ideas at [Savaria.com](https://Savaria.com)



Design your own  
home elevator  
with our online  
configurator



 **savaria.**

[savaria.com](https://Savaria.com)

2 Walker Drive Brampton ON L6T 5E1 Canada

tel: 1.855.728.2742