

Savaria® Pegasus

Inclined Platform Lift

Owner's
Manual

© savaria.



IMPORTANT – READ FIRST

Ensure that only an authorized Savaria mechanic installs and services your Lift. Under no circumstances is anyone other than a mechanic with Savaria training and authorization to install, adjust, service or modify any mechanical or electrical device on this equipment.

Failure to follow this warning can result in safety system compromises or defeat; this can result in serious injury or death. Savaria accepts no liability for property damage, warranty claims or personal injury, including death, in this circumstance.

Passenger safety is the result of countless details in the equipment design, manufacture, and installation. After installation, reliable operation and continual safe operation requires regular inspection and maintenance as outlined in this manual, or more frequently where usage, environment, or local jurisdiction requires. As the Owner, you are responsible for ensuring that regular inspections and maintenance occur in a timely manner as per the manufacturer's recommendations and maintenance schedule.

Refer to this owner's manual for unit description, setup, operating instructions, and a maintenance schedule for your Lift. Upon completion of installation, the Savaria mechanic must provide you with the information for the box below and ensure it is recorded in this owner's manual. In addition, either you or the Savaria mechanic must keep any service and/or maintenance records in the Maintenance Record section of this owner's manual.

At all times, your Lift must be maintained in compliance with the applicable standard to which it has been built and installed.

United States: A18.1–Safety Standard for Platform Lifts and Stairway Chairlift

Canada: CSA B355/613–Platform lifts and stair lifts for barrier-free access

Europe: EN-81-40–Stairlifts and inclined lifting platform intended for persons with impaired mobility

Europe: 2006/42/EC–Machinery Directive

Depending on your country or region, the local authority code variant may apply. To ensure safe operation of your Lift, pay careful attention to the important notes, and follow the instructions and any additional safety regulations in this manual.

FOR OWNER'S RECORDS

Customer Name: _____

Installing Dealer: _____

Dealer's Telephone Number: _____

Date Installed: _____

Serial/Job Number: _____

WARRANTY

Ensure your Savaria Dealer provides you with a copy of the manufacturer's limited parts warranty and documentation relating to any Dealer labour warranty.

CONTENTS

1. SAFETY INSTRUCTIONS	4
To Ensure Safety	4
Proper Use	5
Improper Use	5
2. DESCRIPTION	6
Exterior View	6
Guide Rails	9
Safety Features	10
3. SPECIFICATIONS	12
4. USING THE DEVICE	13
Warnings	13
Operation	14
Manual Operation in an Emergency	16
5. TROUBLESHOOTING	18
6. MAINTENANCE	19
Maintenance Schedule	19
Maintenance Record	23

1. SAFETY INSTRUCTIONS

To ensure safe operation of this unit, pay careful attention to the important notes below.

To Ensure Safety

- Read this manual carefully before using the platform lift.
- To prevent accidents, adhere strictly to the instructions and keep clear of moving parts at all times.
- Never exceed the maximum load capacity as indicated on the side of the carriage.
- Passengers must remain in the wheelchair or seated while the lift is operating.
- Follow instructions on all equipment labels at all times. Replace any damaged labels immediately.
- Ensure that only qualified personnel perform maintenance and service on the unit.
- When replacing parts, be sure that only genuine Savaria parts are used.
- This unit is intended for use by a mature person who understands its proper operation as set out in this manual.



WARNING

At no time should children under the age of 16 use the lift while unsupervised.

- Prior to operation, make sure that:
 - All areas in and around the lift are clear of any obstructions.
 - All lights are functioning properly.
- Test your keys and emergency stop button every month.



WARNING

Wheelchair users must ALWAYS ride facing in the direction of travel. Users without a wheelchair must ride sitting down on the seat and wearing the safety belt.

Proper Use

The Savaria Pegasus is an accessibility device used to provide access over straight-run stairs with a constant gradient. The lift will transport a passenger either sitting in a wheelchair or on the manual folding seat. The lift is designed for use by a self-sufficient person with knowledge of the unit's operation and general maintenance instructions.

NOTE

If the person using the lift is not self-sufficient, it must be operated by an attendant.

Always remain still while the lift is in motion.

Do not use the lift when someone else is using the stairway.



WARNING

Wheelchair users on the platform must ALWAYS ride facing in the direction of travel.

Users without a wheelchair must ride sitting down on the seat and wearing the safety belt.

Improper Use

- Do not transport objects on the platform.
- Do not transport more than one person at a time.
- Do not stand on the platform.
- Do not overload the lift.
- Do not spray any liquids onto the lift or rails.
- Do not make any modifications to the lift.



WARNING

For your safety, use the lift only as intended and read this manual before using the lift.


2. DESCRIPTION

Exterior View

The lift unit is comprised of the components shown in Figure 1 below.


- Platform control panel which has a key switch, an emergency STOP button, an alarm button and a running light (see Figure 4 on page 7) to indicate that the unit is in use
- Drive unit
- Safety arms
- Pendant control
- Carriage (behind cover)
- Platform access ramps
- Manual folding seat (not shown below)
- Main power switch (located on external control box)

Figure 1

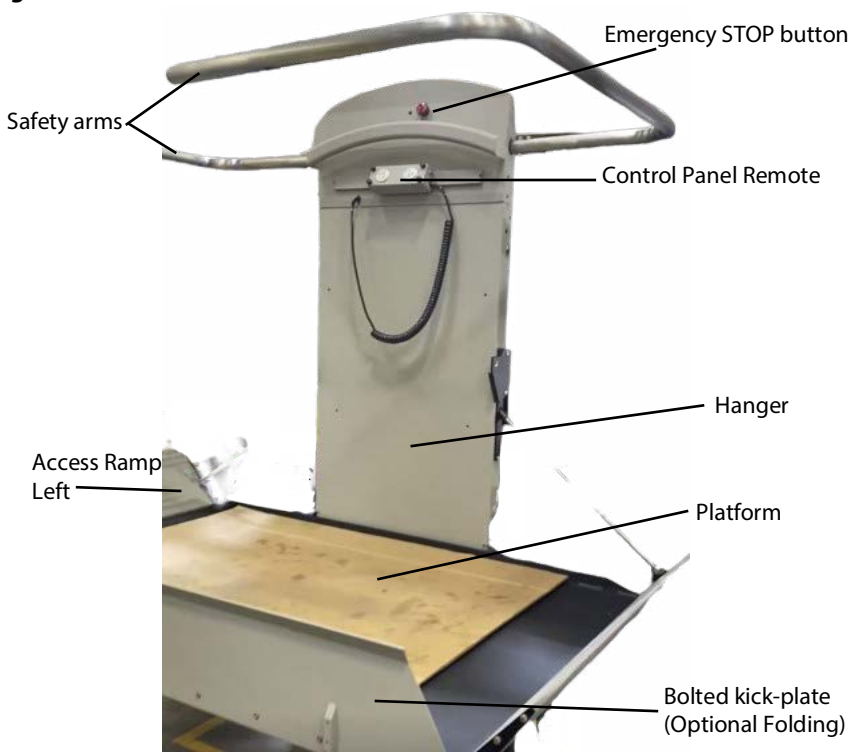

The drive unit contains the components shown in Figure 2 below.

Figure 2

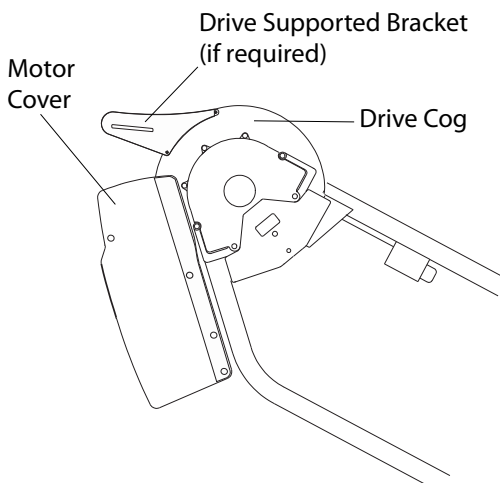

The pendant control (shown in Figure 3 below) has **UP** and **DOWN** buttons to move the lift up and down the stairway and a red emergency STOP button to stop the lift in an emergency. When not in use, hang the pendant control on the safety arm using the hook at the back of the control.

Figure 3



Control Buttons

The control buttons on the pendant and at the landing call stations are constant-pressure type. This means you must press and hold the button to operate it. Release the button to stop the function. The emergency STOP button is push?turn.

Note that you need a key to activate the controls on the platform control panel and at the landing call station (if the call station is equipped with a key switch).



Never use the lift if the control buttons do not work in constant-pressure mode.

The landing call/send stations are hard-wired with up, down, fold and unfold control buttons.

Emergency STOP Button

When you press the red emergency STOP button on the platform control panel, the lift will stop immediately. To release the emergency STOP button, press and turn it slightly clockwise.




Check the emergency STOP button operation weekly. If the lift does not stop when the button is pressed, DO NOT use the lift. Contact your authorized dealer.

Guide Rails

The platform lift travels up and down the stairway along two guide rails – an upper rail and a lower rail. If the gradient is less than 20 degrees, a third rail (horizontal rail) is required to stabilize the platform. Horizontal rail sections may be required at half-landings or stop positions. A sample installation layout is shown below.

Figure 5

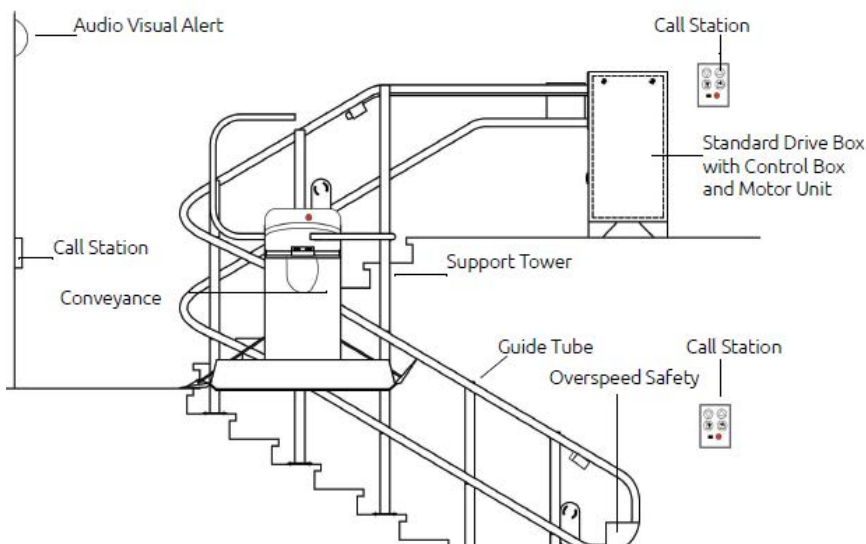

Safety Features

The lift has the following safety features:

- Safety arms
- Platform ramps
- Obstruction sensors
- Drive with self-locking gear and safety brake
- Overspeed governor
- Limit switches
- Audio visual alarm (running buzzer and light)

Safety Arms and Platform Ramps

While in motion, the platform is protected by two safety arms. The platform is also protected by two ramps which have the dual function of facilitating access to the lift at the landings and of retaining the wheelchair while the lift is in motion.

Before the lift leaves the floor, the safety arms must be down and the platform access ramps must be up.

If the safety arms or platform ramps encounter an obstacle as they move into position, a microswitch is tripped, preventing operation of the lift until the obstacle is removed.

Obstruction Sensors

During travel, the edges of the platform ramps and the carriage are protected by sensors which stop the lift if it touches any obstacle. There are also safety underpan sensors to detect any obstacle underneath the platform and carriage and stop the lift.

Safety Brake (Overspeed)

The lift is equipped with a mechanical safety brake. It engages if a drive component fails or if the normal downward travel speed is exceeded by a preset amount. Application of the brake slows the lift to a stop.



When the safety brake engages, the lift remains locked out of use. Contact your authorized dealer to release the brake and return the lift to normal operation.

Limit Switches

The upper and lower limit switches allow the lift to stop automatically in the correct position at the upper or lower end of the staircase. If the upper or lower limit switch fails, the final safety limit switch stops the unit.



If the lift is unable to move after it stops, contact your authorized dealer to return the lift to normal operation.

Audio Visual Alarm

There is an audio visual alarm to indicate that the unit is running. This includes a buzzer and a red running light that flashes when the unit is in use.

Uninterruptible Power Supply (Optional)

In the event of a power outage, the uninterruptible power supply (UPS) will allow the Pegasus to run for an extended period of time. The lift can operate in both directions at full capacity. When the battery is nearly depleted, an audible alarm will sound, notifying the user to move to the nearest landing.

3. SPECIFICATIONS

Performance	
Travel direction	Forward/backward
Travel length	Up to 164 feet (50 metres)
Speed (up/down)	20 ft/min (0.06m/2) on straight sections 10 ft/min on turns and landings
Daily cycle	Normal: 10 Heavy: 30 Excessive: 45 Maximum starts in 1 hour on standard installation: 10
Capacity	1 person in a wheelchair or sitting on the manual folding seat; seat capacity is 330 lb (150 kg)
Maximum load	660 lbs (300 kgs)
Gradient	Variable up to 55°
Environmental Conditions	
Temperature	-31°F to +113°F (-35°C to +45 °C)
Noise	Less than 70 db
Power supply	208-240 VAC (+/-5%), 50-60Hz, single phase on a dedicated 16-20 amp circuit
Motor	2.0 HP (1.5 kW) drive
Controls	
Pendant control buttons	Two drive buttons used to move the lift up or down the stairway and one emergency STOP button
Call station controls	Used to call/send the lift, fold/unfold the platform (for automatic platform); has an optional key switch to enable controls
Platform control panel	Emergency STOP button to bring the lift to an immediate stop Key switch to enable controls Alarm button to signal for help Running light that flashes to indicate the unit is in use
Options	Exterior package (For outdoor applications, consult your local Savaria dealer as not all climates may be suitable for outdoor installations)

4. USING THE DEVICE

IMPORTANT

Prior to operating the lift, a manual wheelchair **MUST** have the wheels locked and any power-operated device **MUST** have the power turned off. If using the provided fold-down seat, ensure that the seat belt is securely fastened.

NOTE

*Position the wheelchair, scooter or walker **CENTRAL** on the platform.*



WARNING

DO NOT drive against the fold-up ramp.


Warnings

- Ensure there is unrestricted access to the platform and main power switch.
- Never overload the platform.
- While on board the lift, always remain seated with the wheelchair brakes on. If the wheelchair is electric, turn it off as long as the lift is moving. Keep your feet on the wheelchair footrest.
- Note that in some installations where there is low overhead, you may have to reposition yourself on the platform to avoid contacting the ceiling.
- If using the optional manual folding seat, make sure the seat belt is securely fastened. Be sure to fold up the seat after use.
- While on board the lift, always look in the direction of travel and stop the lift immediately if there is anyone on the travel route.
- During operation of the lift, the landings and travel route must always be illuminated.
- Keep the platform key in a safe storage place for access by authorized personnel only. Be sure to remove the key after each use.
- Never leave the lift halfway up the staircase.
- Never use the lift unless a trained person is available to operate it in manual mode in an emergency situation.
- Never place your hands or any objects close to the rails or the platform while the lift is in motion.

Operation

- 1 Turn on the main power switch on the external control box. *Note that when the main power switch is turned off, you cannot run the lift using any of the controls.*
- 2 If the lift is not at the desired landing, you can call the lift using the call station controls (Figure 6 shows a call station for an automatic platform). *Note that the call station controls will only control the lift when the platform is folded up.*

Figure 6

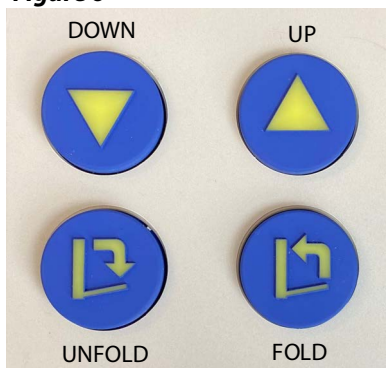

- 3 To call the lift, first insert the key into the call station key switch (if equipped) and turn it on.
- 4 Press and hold either the **UP** or **DOWN** button to move the lift towards you.

NOTE: Make sure you can see the lift at all times when it is moving; stop it immediately if there is an obstacle in the way.

- 5 The lift will stop automatically at the desired landing.
In the event that the lift does not stop after releasing the control button, you can turn off the call station key switch (if equipped) to stop travel.
- 6 Press and hold the **UNFOLD** button on the call station to lower the platform and raise the safety arm. The access ramp will lower automatically. Be careful of the moving parts.
- 7 If using the manual folding seat, fold down the seat.
- 8 Turn off and remove the key from the call station key switch (if equipped).
- 9 Drive the wheelchair onto the platform and park it so that no part of the passenger's body or the wheelchair projects from the platform. Engage the wheelchair brakes. If the wheelchair is electric, turn it off.
If using the manual folding seat, be sure to fasten the seat belt.
- 10 Lower the safety arm and the access ramp will lift up automatically.
- 11 Insert the key into the platform key switch and turn it on to activate the platform controls.

12 To travel up or down the stairs:

- Press either the **UP** or **DOWN** drive button on the pendant control (shown in Figure 8) to drive the lift to the desired landing. *Note that the safety arms remain down and the access ramps remain up in the locked position as long as the lift is in motion.*
- The lift will stop automatically at all landings. If you keep the drive button pressed at an intermediate stop, the lift will stop briefly and then continue traveling towards the next landing.
- If you need to stop the lift along the travel route for any reason, release the drive button. If this does not work, press the red emergency STOP button on the platform control panel or the handheld pendant.

13 When the lift reaches the desired landing, it stops automatically.**14** Keep the drive button pressed until the safety arm is raised and the exit ramp is lowered.

NOTE: If there is an acoustic signal 5 seconds after releasing the drive button, then the lift is probably not in the exact recharging position. Reactivate the drive button to bring the lift to the exact position.

15 Turn off and remove the key from the platform key switch.**16** Disengage the wheelchair brakes and drive off the platform.

If the manual folding seat was used, release the seat belt.

17 Press the **FOLD** button on the call station to fold down the safety arms and fold up the platform (see Figure 9). Fold up the seat by hand.

NOTE: When you fold up the platform, the call station controls are reactivated so you can send the lift to the desired parking station if needed.

18 When the lift is not in use, be sure to switch it off with the platform key and keep the key in a safe place to avoid unauthorized use.

Figure 9



Manual Operation in an Emergency

You can use manual operation to bring the lift to the next landing in the event of a power failure or equipment breakdown.



WARNING

Before proceeding with manual operation, you MUST switch off the main power switch on the external control box.

Moving the Lift in an Emergency

- 1 Remove the screws from the hand-wheel cap..
- 2 Remove the cap. The safety switch located under the cap will turn the power to the lift, OFF. Installing the cap restores power
- 3 Insert the hand-wheel
- 4 Turn the hand-wheel in the desired direction
- 5 Remove the handwheel. Store the handwheel in an easily accessible place.

Figure 10



- 6 Lift up the safety arm and assist the passenger off the platform.

NOTE: If you are unable to drive the lift to the next landing, you will need to release the safety arms as described in the procedure below.

- 7 Lock the platform with the padlock on the carriage.
- 8 Contact your authorized dealer if repair to the lift is required.
- 9 To operate the lift again, turn on the main power switch on the external control box.

NOTE

After use of any emergency function (access key or manual lowering device), ensure that all doors/gates are secure and locked. While the emergency function is in use, DO NOT leave the area unattended.

Egress the Passenger from the platform

A screwdriver or a coin are necessary to turn the unlocking screw located on the side of the hanger.

- For power folding platform, the safety arm must be sustained in vertical position.
- For manual folding platform the arm will stay in the vertical position.
- The ramp will not lower by itself. To unlock the ramp the pins on the back of
- the hangers must be pressed.



WARNING

Do not force the safety arms upwards. This will cause damage to the mechanical parts.

5. TROUBLESHOOTING

For safety reasons, the lift is equipped with several electrical and mechanical locking devices. The lift will not work if any of these devices is tripped or if the order of events is incorrect.



WARNING

Only qualified technicians are authorized to perform repairs and maintenance. DO NOT manipulate, modify or remove any safety feature of the lift. If any issues persist, please contact your authorized Savaria Dealer

Problem	Action
Call station is not working	- When the controls at one call station are activated, all other call stations are automatically deactivated. The lift can only be controlled by one control at a time. - The platform must be folded up for the call station controls to function. - Check that the key switch (if equipped) on the call station is turned on. - Check the batteries in the call station and replace if necessary.
Lift will not move	- Check that the main power switch on the lift is turned on. Turn on the platform key switch and make sure the green lamp on the platform turns on. - Check that there are no blown fuses in the building power distribution box. - Check that all emergency STOP buttons are released. - Check for obstacles underneath the access ramps and platform.

6. MAINTENANCE

The Savaria Pegasus is subject to wear and tear from use. You must perform the checks and actions in the following tables to ensure safety and proper operation.

IMPORTANT

Savaria products are only to be installed, adjusted, serviced, or maintained by Savaria licensed dealers and technicians. Your Savaria product will have the warranty voided if a non-Savaria approved technician performs work on the Savaria product.

For units with high or excessive daily cycles, outdoor use, or use in harsh environments, inspection and maintenance should be conducted more frequently to ensure optimal performance.

MAINTENANCE SCHEDULE		
ITEM TO BE CHECKED	Frequency (Commercial/Exterior)	Frequency (Residential)
Check that the lift does not start moving until the safety arms are down and the access ramps are up in the safety position.	Every 6 months	Normal: Every Year Heavy: Every Year Excessive: Every 6 months
Check that the safety arms and ramps remain closed while traveling.	Every 6 months	Normal: Every Year Heavy: Every Year Excessive: Every 6 months

Verify that the safety arms cannot be lifted up when you are traveling between two landings.	Every 6 months	Normal: Every Year Heavy: Every Year Excessive: Every 6 months
Verify that the lift stops immediately when the emergency STOP button is pressed.	Every 6 months	Normal: Every Year Heavy: Every Year Excessive: Every 6 months
Verify that the lift stops at every landing.	Every 6 months	Normal: Every Year Heavy: Every Year Excessive: Every 6 months
Verify that the lift stops when the directional drive button is released.	Every 6 months	Normal: Every Year Heavy: Every Year Excessive: Every 6 months
Verify that the lift stops immediately if the ramp runs into an obstacle.	Every 6 months	Normal: Every Year Heavy: Every Year Excessive: Every 6 months
Verify that the lift stops immediately if an obstacle is detected underneath the platform.	Every 6 months	Normal: Every Year Heavy: Every Year Excessive: Every 6 months
Use a dry clean cloth to clean the outside of the rail tubes.	As required	As required

Ensure clear access to the drive and main power switch in the external control box.	As required	As required
Verify proper operation of all limit switches.	Every 6 months	Normal: Every Year Heavy: Every Year Excessive: Every 6 months
Check the tension in the drive cable and adjust if required.	Every 6 months	Normal: Every Year Heavy: Every Year Excessive: Every 6 months
Check that the drive sprocket teeth and the nylon rollers on which the lift runs are not worn or damaged. There must be no scoring or flattening of the rollers.	Every 6 months	Normal: Every Year Heavy: Every Year Excessive: Every 6 months
Verify proper operation of the safety brake (overspeed governor).	Every 6 months	Normal: Every Year Heavy: Every Year Excessive: Every 6 months
Check that all fixing screws on the rails and carriage are present and securely fastened.	Every 6 months	Normal: Every Year Heavy: Every Year Excessive: Every 6 months
Check all moving parts, covers, signs, and labels.	Every 6 months	Normal: Every Year Heavy: Every Year Excessive: Every 6 months

Clean the rail thoroughly.	Every 6 months	Normal: Every Year Heavy: Every Year Excessive: Every 6 months
Verify proper operation of the pendant control buttons.	Every 6 months	Normal: Every Year Heavy: Every Year Excessive: Every 6 months
Verify proper operation of the call station control buttons.	Every 6 months	Normal: Every Year Heavy: Every Year Excessive: Every 6 months
Check that all electrical components, contactors and microswitches are operating correctly. Check the condition of all cables. Check the grounding.	Every 6 months	Normal: Every Year Heavy: Every Year Excessive: Every 6 months

NOTE

Units installed in adverse environments will require additional maintenance on a monthly basis.

Maintenance Record

[illegible]

Savaria® Pegasus

Inclined Platform Lift

Owner's Manual

For service or questions about this product,
please contact your installing dealer.

Dealer Name: _____

Dealer Phone: _____

Authorized Savaria Dealer

Savaria Concord Lifts, Inc.
2 Walker Drive Brampton ON L6T 5E1 Canada



savaria.com

Part No. 001450 rev. 001

©2025 Savaria Corporation