

A tall, grey material lift with a diamond plate aluminum floor and stainless steel side guards. The lift is shown in a shaftway with a control panel on the side.

# M-1504 Material Lift

**Durably constructed with 60" or 80"  
stainless steel 5WL side guards  
and diamond plate  
aluminum flooring**

**Larger platform than a  
dumbwaiter and no  
machine room required**

**Carries up to 1000 lb**

## Meet the muscle


The Savaria M-1504 material lift is a commercial freight lift ideal for restaurants, banquet halls, retail stores, veterinary clinics and small industrial businesses. Use this lift to carry freight up to 1000 lb. The M-1504 is built for durability with 60" or 80" stainless steel 5WL side guards and diamond plate aluminum flooring.

This unit is designed for use inside a shaftway, and can be ordered in a choice of standard sized platforms or custom sized. Call stations at each floor control this freight-only hydraulic lift. The M-1504 lift by Savaria delivers a great package of simplicity, handy features and the muscle you need to keep your material moving.

# Savaria® M-1504 Material Lift



- 1000 lb capacity ideal for moving freight such as boxes, wheeled carts, kegs and more
- Durable construction with 60" or 80" stainless steel 5WL side guard panels, diamond plate aluminum flooring and gray powder coat finish on platform frame and tower
- Flexible platform sizes available from a minimum of 24" x 46" up to 48" x 60"
- Reliable hydraulic operation with drive system housed in support tower and no machine room required for easy, space-saving installation
- Constant pressure operation with optional automatic operation available, servicing up to 4 stops (code permitting)
- Designed for hoistway applications with call/send buttons, configure exit/entry for same side or straight through access
- Manual lowering and emergency battery backup operation in both directions in case of power failure, safety brake, emergency stop and door lock trigger button on platform
- Optional: fire-rated landing Prodoors; A17.1 code package with 80" side guards, pump run timer, hardpipe hydraulics, buffer springs, pit prop and emergency hall calls; automatic operation for B20.1 code

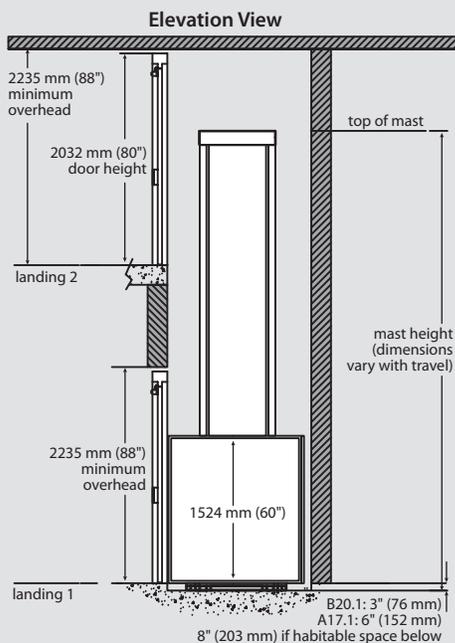

## Specifications

Applications	Commercial, indoor, hoistway application
Capacity	1000 lb (455 kg)
Maximum travel distance	23' (7 m) for B20.1 and A17.1 2016 and later; 200" (5 m) for A17.1 2013 and earlier
Custom platform sizes	From 24" x 46" (610 mm x 1168 mm) up to 48" x 60" (1219 mm x 1524 mm)
Nominal speed	18 ft/min (0.09 m/s)
Levels/stops	Standard: 2; optional: A17.1 2016 and later up to 3 stops, B20.1 up to 4 stops
Car access/configurations	Enter/exit same side, straight through enter/exit
Power supply	120 VAC, 30 A, 60 Hz, single phase, 24 V battery backup
Drive system	2:1 chain hydraulic, 3 hp gear-type motor for 110V
Pit Requirements	B20.1: 3" (76 mm); A17.1: 6" (152 mm); 8" (203 mm) if habitable space below
Finish	Gray powder coat paint on platform frame and tower, stainless steel 5WL side guards, diamond plate aluminum flooring
Warranty	36 months parts, ask for details

**Talk to your local Savaria dealer to learn how the M-1504 material lift can provide the extra muscle you need to move materials and freight in your business.**

Authorized Savaria Dealer:



[www.savaria.com](http://www.savaria.com)

2 Walker Drive, Brampton, ON L6T 5E1 Canada

tel: 800.661.5112 fax: 905.791.2222